

Art.no

## ***60443 - Hexagon Floor Tiles***

We are introducing a new solid floor tile to the market, designed for use in tents and outdoor facilities where a solid floor is required.

The tiles may be mounted without use of special equipment, a patented solution for connecting the tiles, setting a maximum distance between the tiles of 3 mm.

The tiles are flexible also for surfaces that are not 100% leveled, picking up minor obstructions on the ground. Suitable surface: Turf, Soil, Sand, Gravel, Snow, Tarmac & Concrete.

Adjustments of the tiles may be done by use of ordinary saw. A pattern on the back of the tiles simplifies cutting the tiles into halves to make an event edge of the floor.


We recommend use of a protective tarpaulin under the tiles as moisture barrier, adding insulation to the floor system. By use of additional insulation material, the comfort in the tent will increase accordingly.

The tiles are made of UV- resistant, recycled plastic, with anti- skid surface that is easily cleaned by use of water/brush or a high-pressure washer.

Material: Recycled PE & PP without PVC.

Weight and dimensions:

Size	Height	Weight/ ea	Weight/ m <sup>2</sup>	Number/ m <sup>2</sup>
40/46 cm	4 cm	1, 9 kg	13,3 kg	7

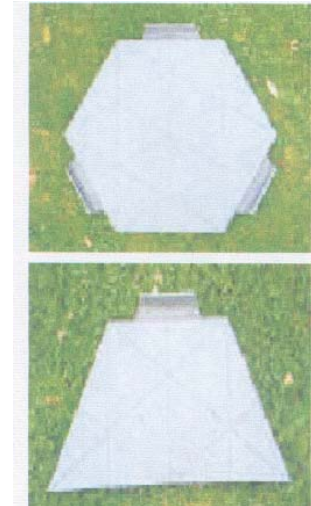

The tiles may be used outdoors all year.