


## **ROFI NORTENT**

*- for extreme conditions*

- For extreme temperatures
- High quality
- High comfort
- Multiple use
- Simple logistics

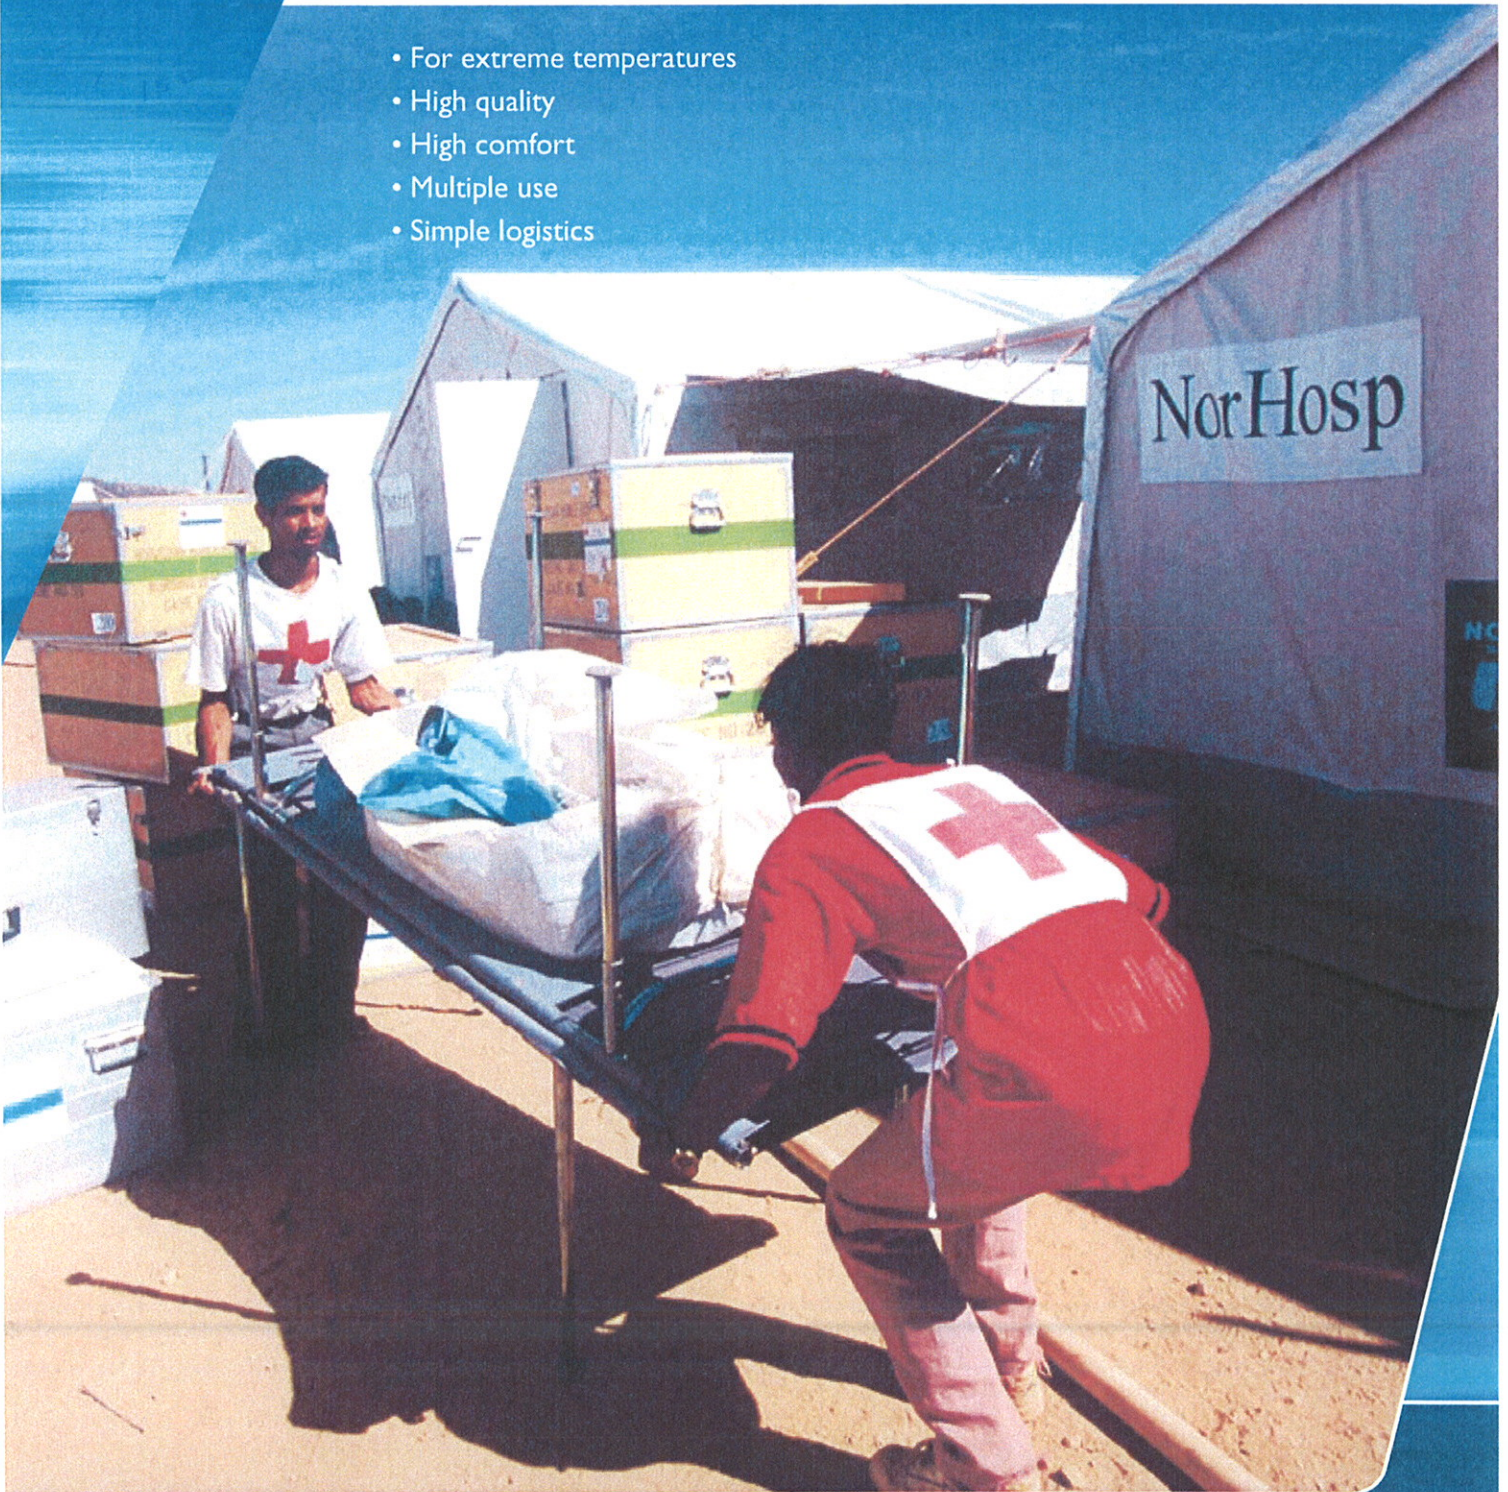

Field Hospital  
Accommodation  
Staff-/office tent  
Recreation area  
Decon-station

## ROFI NORTEENT

– A preferred solution providing high comfort with a minimum of maintenance during field operations. Primarily used as hospital tent in disaster situations.


Designed for temperatures in tropical- and arctic climatic conditions, from – 46 to + 49°C.

### Climate Zones:

A1 – A3, B1 – B2, C0 – C2  
in accordance with STANAG 2895

### Key features:

- Size: 90 m<sup>2</sup> (6x15) m
- High quality
- High comfort
- Solid doors and large gateways
- Shade curtains along the sides
- Multiple use

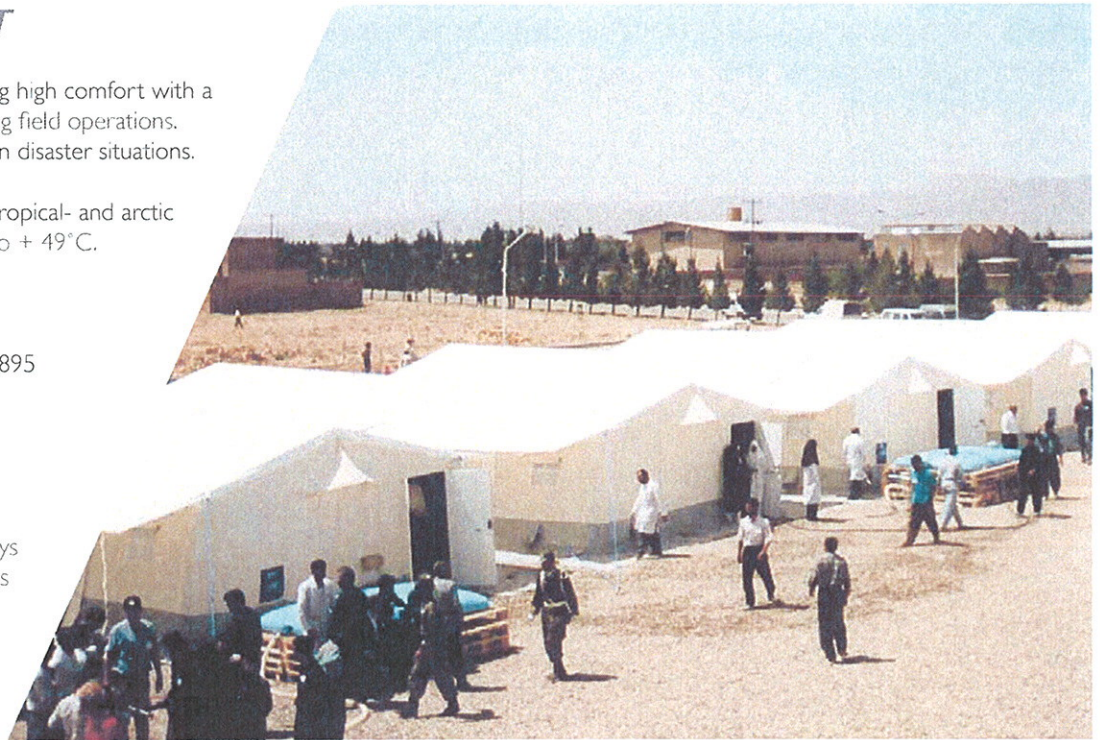

### AREA OF USE:

- Field Hospital
- Accommodation
- Staff/ office tent
- Recreation area
- Decon-station

ROFI NORTEENT has over the past decades shown an extraordinary capability of withstanding even the roughest weather conditions, used in both arctic and tropic areas for long term deployment. The tent is preferred solution as field hospital- and accommodation tent to NGOs, also used for special purposes such as decon station when a large tent is required due to capacity.



### ADVANTAGES:

- Spacious
- Solid framework and high quality fabrics
- Snow-/sand load capacity: 75 kg/ m<sup>2</sup>
- Wind load capacity: 100 km/ hour
- Simple set-up – no special tools required
- Natural ventilation, but also prepared for use of AC/heater
- Integrated PVC- flooring protects against surface water and reptiles/ bugs
- Shade curtains
- Multiple area of use

ROFI NORTEENT is a high quality tent designed for extreme weather conditions, in both tropic and arctic temperatures. The tent has a wind load capacity of 100 km/ hour and snow-/ sand load capacity of 75 kg/ m<sup>2</sup>.

ROFI NORTEENT is insulated through double layer fabrics, the integrated floor protecting against surface water; bugs and reptiles. Multiple layer windows and vents allows for natural ventilation. Solid doors at each gable and roll-up doorways, secures easy access for staff and for equipment. Use of solid door into the tent increases the feeling of living in "house-like" conditions.

ROFI NORTEENT has PVC-roof as standard, protecting against heavy rain and reducing risk of snow or sand gathering on the roof. For added comfort and insulation, the tent is delivered with insulation materials to be placed under the integrated PVC-floor; on top of tarpaulins acting as humidity barrier towards the ground.

ROFI NORTEENT has an expected life time of 10-15 years, provided being deployed and stored in accordance with instructions.

We recommend considering use of solid floor tiles, for installation in cabins, in hallways or the whole tent. If possible, the floor tiles should be installed under the PVC-flooring in the tent.

## **ROFI NORTENT**

### **Field hospital**

The width of ROFI NORTENT provides sufficient space for placing hospital beds across of each other, leaving a walkway in the middle for easy access with patients. The tent may easily be split in sections by means of separation walls, creating treatment- and functions areas necessary in a Field Hospital concept, such as operation theatre, ICU, examination area, medical storage facilities etc.

ROFI NORTENT is designed to assure a clean environment within a field hospital configuration. Air distribution through distribution hoses in the roof make sure the cooled or heated air is evenly distributed throughout the tent.

In a field hospital configuration, it might be particularly important to consider installation of solid floor tiles, for easy transport of patients and equipment.




## **ROFI NORTENT**

### **Accommodation**

The width of ROFI NORTENT provides sufficient space for placing field beds or bunk beds across of each other, leaving a walkway in the middle for easy access. The tent may easily be split in sections by means of separation walls, creating joint accommodation areas for teams/ groups.

One ROFI NORTENT of 90 m<sup>2</sup> may accommodate 24-48 persons, depending upon choice of type bed and how much room each person should be allowed. Using collapsible field beds there is room for 24-28 persons. By using bunk beds, you may accommodate up to 48 persons, - the standard to be set by the customer.

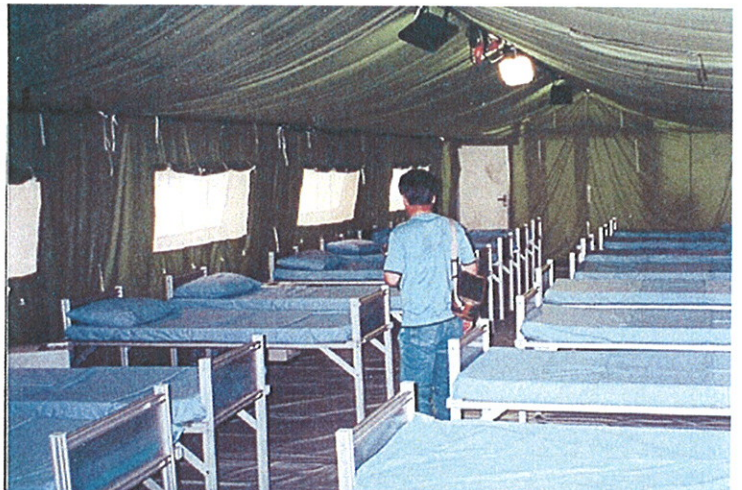

## **ROFI NORTENT**

### **Office-/staff tent**

ROFI NORTENT is suitable for use as office-/ staff tent. Use of separation walls create smaller sections and enables office space in a rational manner. We also may offer crosswise separation walls for dividing the tent into smaller units.

## **ROFI NORTENT**

### **Decon tent**

In situations requiring decontamination procedures for high numbers of casualties, ROFI NORTENT provides a functional operation area for installation of parallel decon lines with test area, dressing area and shower area.



ISO 9001 Certified



Certificate no. XXX

ROFI Industrier as represents more than 60 years of experience within the textile industry. A comprehensive integration with our suppliers and partners enable us to meet the requirements for progressive development, system solutions and a stock-hold of selected items. We continuously maintain our certificate covering quality assurance/quality control.

## NOREPS Approved

The products meet stringent quality standards, are tested under tough field conditions and preferred by NGO's and UN-organizations through NOREPS emergency service. Part of preparedness stock.



24 hours a day,  
365 days a year,  
we are able to deliver  
this commodities to  
an international  
airport within 24 hours.

## REFERENCES

ROFI is an experienced supplier of tents to UN-Agencies, NGOs and defence customers, with success in introducing new tent models meeting customer requirements and changing conditions world wide.

ROFI NORTENT is standard soft shelter to the Field Hospital Emergency Response Unit of the Norwegian Red Cross and also to NORHOSP.

The tent has been used in disaster situations such as the Tsunami in South- East Asia and the earthquakes in Iran and Pakistan.

## SHIPPING INFORMATION



Packed in wooden box and transport cover.

Box 1: L:391xW:115xH:63 cm = 2,83 m<sup>3</sup>/ 528 kg


Box 2: L:120xW:80xH:134 cm = 1,29 m<sup>3</sup>/ 437 kg

Cover: L:202xW:75xH:75 cm = 1,14 m<sup>3</sup>/ 23 kg


## ROFI FIELD EQUIPMENT



ROFI AC/Heaters

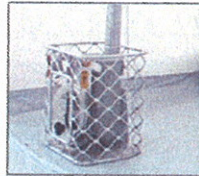

ROFI Volcano sauna

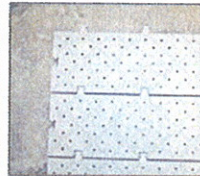

ROFI Floor



ROFI Folding chair/table



ROFI Lighting



ROFI Camp light



ROFI Camp light



ROFI Cabin light



ROFI Bench



ROFI Field bed




ROFI Disco bed



Water heater



ROFI Field sink

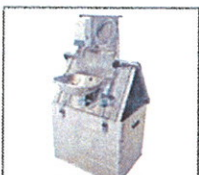

ROFI Surgical sink



ROFI Cinderella toilet



ROFI Pacto toilet



ROFI Toilet/Shower tent

Specifications may be altered without notice due to progressive product development.